

## 1 | Overview

The B901 Access Control module is a fully supervised SDI2/SDI device that allows access control integration for compatible control panels. Each module can store up to 2000 user tokens (on SDI2), each with a different access level for each door. Authority for access is controlled by the user's authority level, the time of day, the state of the door, and the armed state to the module.

### Compatible Credential Formats

37 bit	HID H10304 (With Site Code)
37 bit	HID H10302 (No Site Code)
26 bit	HID H10301 EM-EM4200 (3-byte or 5-byte)

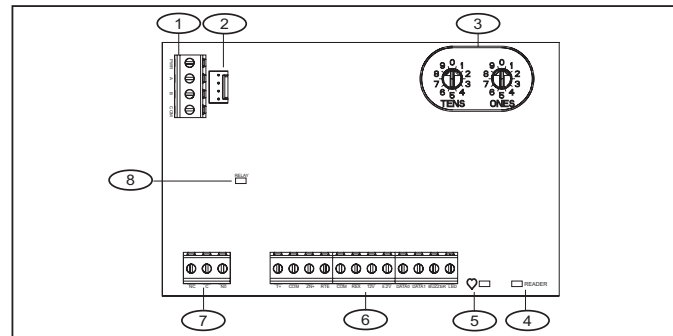


Figure 1.1: Access control module

### Callout – Description

- 1 – Terminal connector
- 2 – Interconnect wiring connectors
- 3 – Address switch
- 4 – Reader LED
- 5 – Heartbeat LED (blue)
- 6 – Reader and door terminals
- 7 – Relay terminals
- 8 – Relay LED

## 2 | Address settings

Two address switches determine the address for the B901 Access Control Module. The control panel uses the address for communications. The address also determines the output numbers. Use a slotted screwdriver to set the two address switches.



### NOTICE!

The module reads the address switch setting only during power up. If you change the switches after you apply power to the module, you must cycle the power to the module in order for the new setting to be enabled.

Set the address switches per the control panel configuration. If multiple B901 modules reside on the same system, each B901 module must have a unique address. Figure 2.1 shows the address switch settings for address 01.



Figure 2.1: Address switches

## 2.1 | Valid addresses for SDI2

Valid B901 addresses are dependant on the number of modules allowed by a particular control panel.

Control panel	Valid B901 addresses	Designation
B9512G/B9512G-E	01 - 32	Devices 1 - 32
B8512G/B8512G-E	01 - 08	Devices 1 - 8

Control panel	Valid B901 addresses	Designation
B6512	01 - 04	Devices 1 - 4

## 2.2 | Valid addresses for SDI

Valid B901 addresses are dependant on the number of modules allowed and the desired failure mode (Fail Safe, Fail Secure) by a particular control panel.

Control panel	Valid B901 addresses	Designation
B9512G/B9512G-E/ B8512G/B8512G-E D9412GV4/D7412GV4 D9412GV3/D7412GV3	81 - 88	Devices 1 - 8 Fail Safe mode = door unlocked
D9412GV2/D7412GV2, D9000	91-98	Devices 1 - 8 Fail Se- cure = door locked

## 3 | Installation

After you set the address switch for the proper address, install the module in the enclosure, and then wire it to the control panel.



### CAUTION!

Remove all power (AC and battery) before making any connections. Failure to do so might result in personal injury and/or equipment damage.



### NOTICE!

B901 tamper generates an SDI - "Missing Door" or an SDI2 - "Module Tamper" message (if Enclosure Tamper parameter is set to Yes).

## 3.1 | Mount the module in the enclosure

Mount the module into the enclosure's 3-hole mounting pattern using the supplied mounting screws and mounting bracket. Refer to Figure 3.1.

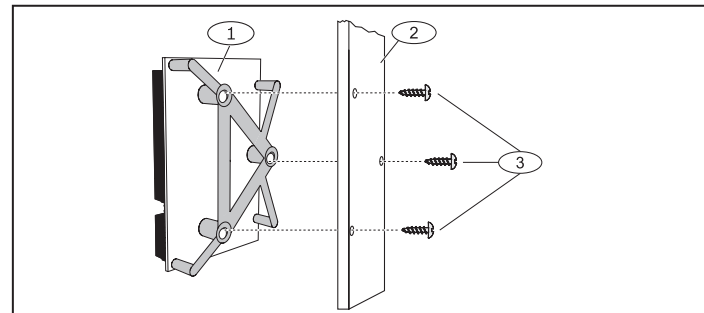


Figure 3.1: Mounting the module in the enclosure

### Callout – Description

- 1 – Module with mounting bracket installed
- 2 – Enclosure
- 3 – Mounting screws (3)

## 3.2 | Mount the access card reader

Refer to your access card reader installation instructions for proper installation and maintenance procedures related to your supported card reader.

## 3.3 | Wire to the SDI2 control panel

When you wire the module to a control panel, use the control panel terminals labeled R, Y, G, B (PWR, A, B, COM). Connect them to the module terminals labeled R, Y, G, B (PWR, A, B, COM). Use either terminal strip wiring or interconnect wiring connector to the control panel. Do not use both. Refer to Figures 3.2 - 3.3.

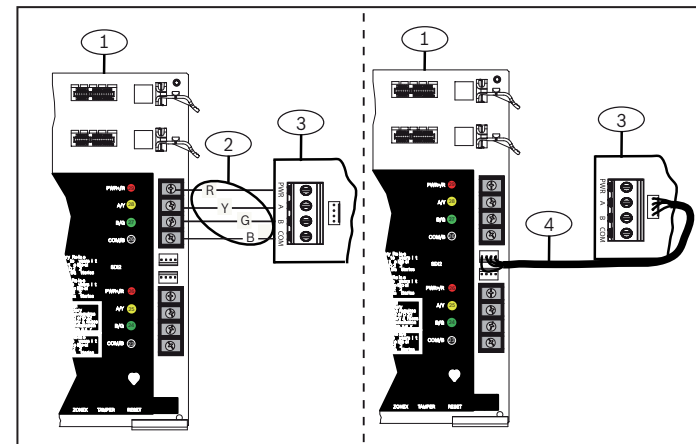


Figure 3.2: SDI2 wiring from control panel to B901

### Callout – Description

- 1 – Bosch control panel (B9512G shown)
- 2 – Terminal wiring
- 3 – B901 Access Control Module
- 4 – Interconnect cable (P/N: F01U79745) (included)

## 3.4 | Wire to the SDI control panel

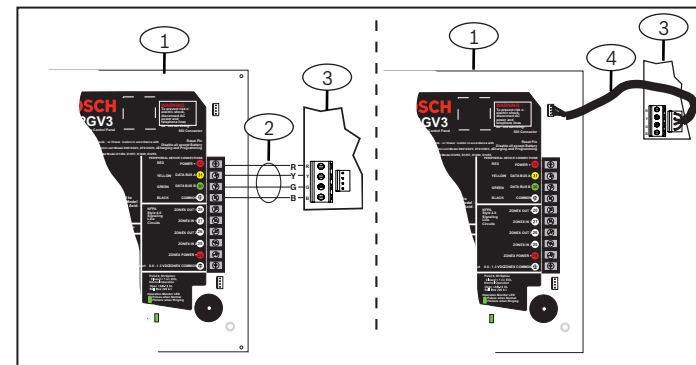


Figure 3.3: SDI wiring from control panel to B901

### Callout – Description

- 1 – Bosch control panel (GV3 shown)
- 2 – Terminal wiring
- 3 – B901 Access Control Module
- 4 – Interconnect cable (P/N: F01U79745) (included)

## 3.5 | Wire to the card reader

Use the terminals labeled LED, DATA1, DATA0, 5.2V or 12V, COM, and T+ when wiring the module to a card reader. Refer to Figure 3.4.

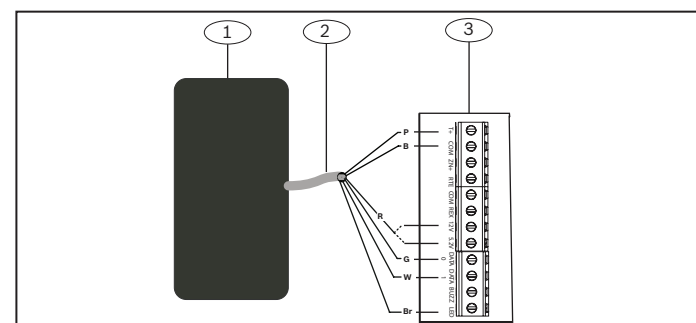


Figure 3.4: Wiring the card reader to the B901

### Callout – Description

- 1 – Card reader (ARD-AYK12 shown)
- 2 – Terminal wiring
- 3 – B901 Access Control Module

## 3.6 | Wire to 12VDC power supply (optional)

Refer to Figure 3.5 to wire additional power to a regulated power-limited power supply for fire protective signaling units and commercial/residential burglar units.

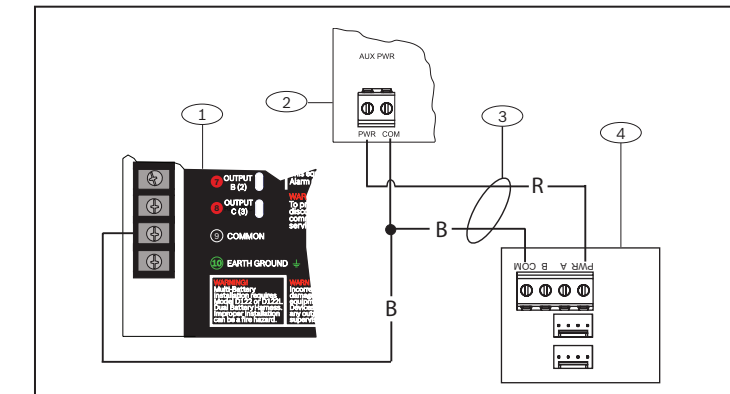


Figure 3.5: Wiring the card reader to the B901

### Callout – Description

- 1 – Control panel COM terminal (B9512G shown)
- 2 – 12 VDC regulated power-limited power supply (B520 shown)
- 3 – Terminal wiring (PWR and COM terminal wiring)
- 4 – B901 Access Control Module



### NOTICE!

Use only Access Control listed power supplies for powering door strikes.

## 3.7 | Wire to the door strike

A relay provides a dry contact single pull double throw output. Some strikes require a closed circuit to unlock the door, while others require an open circuit to unlock the door.

- Common (C). For 12/24 VDC strikes, provide input power here from the power supply. Refer to Figure 3.6.
- Normally closed (NC). For door strikes that require an interruption of power to open. Connect the positive side of the door strike to the NC terminal. Refer to Figure 3.6.
- Normally open (NO). For door strikes that require power to open. Connect the positive side of the door strike to the NO terminal. Refer to Figure 3.6.

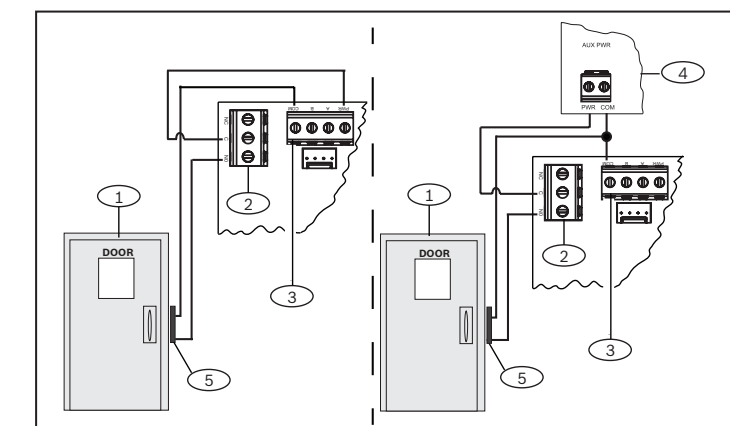


Figure 3.6: Wiring the door strike to the B901

### Callout – Description

- 1 – Door
- 2 – B901 door lock relay terminal
- 3 – B901 terminal
- 4 – AUX PWR terminal (12 VDC) (B520 shown)
- 5 – Door strike (12 VDC)

### 3.8 | Wire to door contact

Wire the door contact.

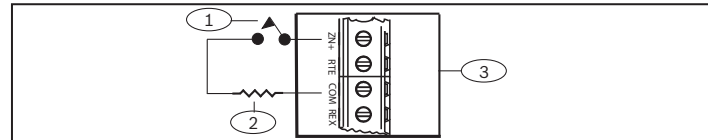


Figure 3.7: Wiring the door contact

#### Callout – Description

- 1 – Door Contact
- 2 – 1k EOL
- 3 – B901 Access Control Module

### 3.8.1 | Request to Enter (RTE)

Wire the Request to Enter (RTE) device. The strike is activated, and the door point is shunted when RTE is momentarily shorted to COM. The *Shunt only* option shunts the point when this input is momentarily shorted. To activate the shunt but not the strike, program RTE Shunt Only? as [YES].

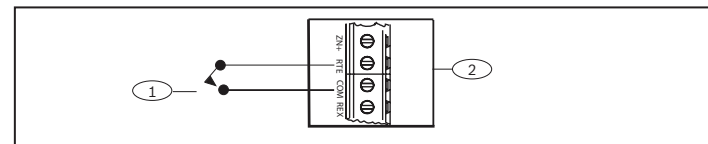


Figure 3.8: Wiring the RTE

#### Callout – Description

- 1 – RTE device
- 2 – B901 Access Control Module

### 3.8.2 | Request to Exit (REX)

Wire the Request to Exit (REX) device.

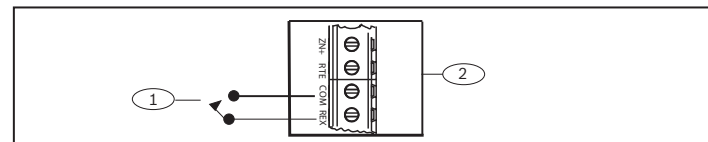


Figure 3.9: Wiring the REX

#### Callout – Description

- 1 – REX device
- 2 – B901 Access Control Module

The strike is activated, and the door point is shunted when REX is momentarily shorted to COM. The *Shunt only* option shunts the point when this input is momentarily shorted. To activate the shunt but not the strike, program REX Shunt Only? as [YES].



#### NOTICE!

Do not use a Request to Exit device (REX) for emergency exit applications. NFPA 101 requires that a UL Listed panic device be used to provide direct power from the standby power source. Check with your local Authority Having Jurisdiction (AHJ) prior to installing your system.

### 4 | Configuration

After you wire the module, power up the system and configure the B901 using Remote Programming Software (RPS) to assign the module to an assigned area. Whenever possible, be consistent when numbering doors, areas, and keypads. For example, assign Door 1 to Area 1 and keypad 1. Test for proper operation.

### 5 | LED descriptions

The module includes one blue Heartbeat LED, and one Reader LED. The Heartbeat LED indicates that the module has power as well as a module's current state. The Reader LED indicates data transmission. Refer to Table 5.1.

Flash Pattern	Function
Flashes once every 1 sec 	Normal state: Indicates normal operation state. (blue)
ON Steady 	LED trouble state: Module is not powered (for OFF Steady only), or some other trouble condition prohibits the module from communicating with the control panel.
OFF Steady 	
Flashes rapidly 	Card data is executing (yellow)
OFF Steady 	No card data is being received

Table 5.1: LED descriptions

### 6 | Show the firmware version

To show the firmware version using an LED flash pattern:

- If the optional tamper switch is installed: With the enclosure door open, activate the tamper switch (push and release the switch).
- If the optional tamper switch is NOT installed: Momentarily short the T+ terminal.

Refer to Figure 6.1 for an example of flash patterns.

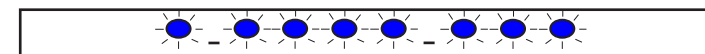 


Figure 6.1: Firmware LED flash patterns

When the tamper switch is activated, the heartbeat LED stays OFF for 3 sec before indicating the firmware version. The LED pulses the major, minor, and micro digits of the firmware version, with a 1 sec pause after each digit.

In the following example, the version 1.4.3 shows as LED flashes: [3 sec pause] \* \_\*\*\*\*\_\*\*\* [3 sec pause, then normal operation].



#### NOTICE!

Firmware reprogramming on the B901 is not supported if connected via the SDI bus. Updating the firmware is achieved via the SDI2 connection only.

### 7 | Certifications

Region	Certification
USA	UL 294 - Access Control System Units
	UL 365 - Police Station Connected Burglar Alarm Units and Systems
	UL 609 - Local Burglar Alarm Units and Systems
	UL 864 - Control Units and Accessories for Fire Alarm Systems
	UL 985 - Household Fire Warning System Units
	UL 1023 - Household Burglar-Alarm System Units
	UL 1076 - Proprietary Burglar Alarm Units and Systems
	UL 1610 - Central Station Burglar Alarm Units
	CSFM - California Office of The State Fire Marshal
	FCC Part 15 Class B
	CA
CAN/ULC S304 - Signal Receiving Centre and Premise Alarm Control Units	
ULC-ORD C1023 - Household Burglar Alarm System Units	
ULC-ORD C1076 - Proprietary Burglar Alarm Units and Systems	
ULC 2016701-S1871E - Fire Alarm and Security Subassemblies	
ICES-003 - Information Technology Equipment (ITE)	

Approved For	Level	Comment
Destructive Attack	I	
Line Security	IV	IP or cellular with encryption
Line Security	II	IP or cellular without encryption
Line Security	I	B430/PSTN
Endurance	IV	
Send by Power	IV	

### 8 | Specifications

Dimensions	2.9 in x 5.0 in x 0.6 in (73.5 mm x 127 mm x 15.25 mm)
Voltage (input)	12 VDC nominal
Current	Standby: 110 mA + reader current Alarm: 110 mA + reader current
Alarm output	Form C relay (NC, COM, NO) at 12/24 V @ 2.0 A
Operating temperature	0°C to +50°C (+32°F to +122°F)
Relative humidity	5% to 93% at +32°C (+90°F) non-condensing
Terminal wire size	18 AWG to 22 AWG (1.02 mm to 0.65 mm)
SDI2/SDI wiring to B901 + Reader with external power supply	Maximum distance - wire size (unshielded wire only): 1000 ft (305 m) - 22 AWG (0.65 mm), 2500 ft (762 m) - 18 AWG (1.02 mm)
SDI2/SDI wiring to B901 + Reader from control panel	175 ft (53 m) - 22 AWG (0.65 mm), 450 ft (137 m) - 18 AWG (1.02 mm)
Wiring distance from B901 to Reader	200 ft (61 m) - 22 AWG (0.65 mm), 500 ft (152 m) - 18 AWG (1.02 mm) Reader dependant
Bosch compatible control panels	B9512G/B9512G-E/B8512G/B8512G-E/B6512/D9412GV4/D7412GV4/D9412GV3/D7412GV3/D9412GV2/D7412GV2/D9412G/D7412G (Refer to the control panel installation document for the number of supported devices.)
Bosch compatible readers and accessories	ARD-AYH12 EM Prox Wall Mount ARD-AYJ12 EM Prox Mullion ARD-AYK12 EM Prox Mini Mullion ARD-AYQ12 EM Prox Wall Mount Vandal Resistant ARD-AYCE65B EM Prox or PIN Mullion ARD-R10 HID iClass Mini Mullion ARD-R40 HID iClass Wall Mount D8223 HID Prox Wall Mount D8224 HID Prox Mullion D8224-SP HID Prox Switch Plate Mount D8225 HID Prox Mini Mullion D8229 PIN Reader
Bosch compatible credentials	ACA-ATR13 EM Tokens* ACD-ATR11ISO EM Cards* ACD-ATR14CS EM Clamshell Cards ACD-IC2K26-50 iClass Cards** ACT-IC2K26-10 iClass Tokens** D8236-10 HID Prox Cards*** D8236KF-10 HID Prox Tokens***
* EM cards work with EM readers, ** iClass cards work with iClass readers, *** Prox cards work with Prox readers	

#### Copyright


This document is the intellectual property of Bosch Security Systems, Inc. and is protected by copyright. All rights reserved.

#### Trademarks

All hardware and software product names used in this document are likely to be registered trademarks and must be treated accordingly.

#### Bosch Security Systems, Inc. product manufacturing dates

Use the serial number located on the product label and refer to the Bosch Security Systems, Inc. website at <http://www.boschsecurity.com/datecodes/>.

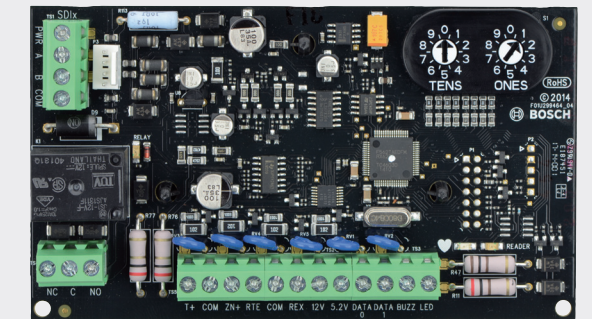

## Access Control Interface Module B901



en Installation Guide

**Bosch Security Systems, Inc.**  
130 Perinton Parkway  
Fairport, NY 14450  
USA  
[www.boschsecurity.com](http://www.boschsecurity.com)

**Bosch Sicherheitssysteme GmbH**  
Robert-Bosch-Ring 5  
85630 Grasbrunn  
Germany

