

SynopSYS™ Security Management Software



WAN

Long Range Radio Transmitter



x1



Plug-in Fast PSTN Modem
RP432MD2400A

x1 IP or Fast PSTN

Plug-in IP Module



RP432IP0000A

Plug-in GSM/GPRS Module



RP432GSM000A

x1

WAN

RISCO Cloud Server



Monitoring Stations



www.riscocloud.com web interface



App Store Play Store IRISCO

WAN

PC to Panel Cable

RW132EUSB00A



Configuration Software



RISCOBUS
Save • Control • Win

- Main Panel RS485 Bus line supports up to 32 Bus devices: Keypads, Expanders, Bus Detectors & Sounders
- 300m max. length for Main Panel Bus line and for Detector Bus lines with standard alarm cable
- 1000m max. length per Bus line with shielded twisted pair Cat. 5 cable, and on condition Bus Test result is above 97%



LightSYS Main Board
RP432M00000D

- 8-50 Zones
- 4 Partitions
- 4 Groups per Partition
- 4-32 Outputs
- 30 User Codes
- 500 Event Log
- Selectable Zone Resistance

Voice Module



RP432EV0001C

x1

Non-Bus wiring

Listen-in & Speak Module

RW132EVL000A

x4

8 x 100mA O.C. Output Expander



RP296E08000A

x6 Output Expanders per system

4 x 3A Relay Output Expander



RP296E04000A

8 Zone Expander



RP432E08000A

x5 per system

Assign Single Zone Expanders to zones 9 & 10 and then add 8 Zone Expanders in order to reach 50 wired zones

1.5A Power Supply

RP296EPS PCB
RP296EPSP00A Boxed, EU



x4 Power Supply Expanders per system

3A Power Supply

RP128EPS000A PCB
RP128PSPSEUA Boxed, EU



Elegant Keypads

- RPKELW0000A
- RPKELPW0000A with prox
- RPKEL0B0000A black
- RPKELPW0000A black with prox

x4 wired keypads per system



Touchscreen Keypads

- RP128KP0200A
- RP128KPP200A with prox



ProSYS Keypads

- RP128KCL0ICA
- RP128KCLPICA with prox



LightSYS Keypads

 
- RP432KP0000A
- RP432KPP000A with prox



x8 per system

Indoor Cube IP Cameras

RVCM11H0000A



Outdoor Bullet IP Cameras

RVCM52E0100A

Prox Key Readers

RP128PKR300A

For Italian market

Bus Zone Expander

RP128EZB000B

Acts as Bus isolator and Bus detector concentrator



x4 Bus Zone Expanders per system

WatchOUT



WatchOUT



BWare Bus



Seismic Detector



 
Single Zone Expanders
RP128EZ0100A

x2 per system

Detector Bus Lines

Up to 512 Bus Detectors per system
Up to 32 per Bus Zone Expander, or directly on main panel Bus, with shielded twisted pair Cat. 5 cable
Up to 20 Bus Detectors recommended per Bus Zone Expander or on main panel Bus, for better performance with regular alarm cable, and for higher security

ProSound



Lumin8

x4 sounders per system



Wireless BWare DT



Wireless Door/Window Contacts



Wireless CO & Gas Detectors



Wireless CO & Gas Detectors

x50 wireless detectors per system
x32 per Wireless Expander



Wireless Sounders

x4 wireless sounders per system



Wireless Curtain PIR



Wireless Flood Detector



Wireless Flood Detector

x3 per Wireless Expander



2-Way Wireless Slim Keypads

x4 wireless keypads per system
x2 per Wireless Expander



2-Way Keyfob

 
x16 Rolling Code Keyfobs per system
x16 per Wireless Expander



1-Way Keyfob



Panic Keyfob



Wristband Panic