Face Recognition Access Controller with Temperature Monitoring Unit Quick Start Guide



Foreword

General

This manual introduces the installation and basic operations of the face recognition access controller with temperature monitoring unit (hereinafter referred to as "access controller").

Safety Instructions

The following categorized signal words with defined meaning might appear in the manual.

Signal Words	Meaning
DANGER	Indicates a high potential hazard which, if not avoided, will result in death or serious injury.
warning warning	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
A CAUTION	Indicates a potential risk which, if not avoided, could result in property damage, data loss, lower performance, or unpredictable result.
OT TIPS	Provides methods to help you solve a problem or save you time.
NOTE	Provides additional information as the emphasis and supplement to the text.

Revision History

Version	Revision Content	Release Time
V1.0.0	First release.	May 2021

About the Manual

- The manual is for reference only. If there is inconsistency between the manual and the actual product, the actual product shall prevail.
- We are not liable for any loss caused by the operations that do not comply with the manual.
- The manual would be updated according to the latest laws and regulations of related regions.
 For detailed information, see the paper manual, CD-ROM, QR code or our official website. If there is inconsistency between paper manual and the electronic version, the electronic version shall prevail.
- All the designs and software are subject to change without prior written notice. The product updates might cause some differences between the actual product and the manual. Please contact the customer service for the latest program and supplementary documentation.
- There still might be deviation in technical data, functions and operations description, or errors in print. If there is any doubt or dispute, please refer to our final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF

- format) cannot be opened.
- All trademarks, registered trademarks and the company names in the manual are the properties of their respective owners.
- Please visit our website, contact the supplier or customer service if there is any problem occurred when using the device.
- If there is any uncertainty or controversy, please refer to our final explanation.

Important Safeguards and Warnings

This chapter describes the contents covering proper handling of the access controller, hazard prevention, and prevention of property damage. Read these contents carefully before using the access controller, comply with them when using, and keep the manual well for future reference.

Operation Requirements

- Do not place or install the access controller in a place exposed to sunlight or near the heat source.
- Keep the access controller away from dampness, dust or soot.
- Keep the access controller installed horizontally on the stable place to prevent it from falling.
- Do not drop or splash liquid onto the access controller, and make sure that there is no object filled with liquid on the access controller to prevent liquid from flowing into the access controller.
- Install the access controller in a well-ventilated place, and do not block the ventilation of the access controller.
- Operate the access controller within the rated range of power input and output.
- Do not dissemble the access controller randomly.
- When used in outdoors with high temperature, do not directly touch the surface of the access controller, such as the screen, metal back shell, and fingerprint sensor.

Electrical Safety

- Improper battery use might result in fire, explosion, or inflammation.
- When replacing battery, make sure the same model is used.
- Use the recommended power cables in the region and conform to the rated power specification.
- Use the power adapter provided with the access controller; otherwise, it might result in people injury and device damage.
- The power source shall conform to the requirement of the Safety Extra Low Voltage (SELV) standard, and supply power with rated voltage which conforms to Limited power Source requirement according to IEC60950-1. Please note that the power supply requirement is subject to the device label.
- Connect the device (I-type structure) to the power socket with protective earthing.
- The appliance coupler is a disconnection device. When using the coupler, keep the angle for easy operation.

Table of Contents

Foreword	l
Important Safeguards and Warnings	III
1 Dimensions and Components	
2 Connection and Installation	
2.1 Cable Connection	3
2.2 Installation Notes	
2.3 Installation	
3 System Operations	9
3.1 Initialization	9
3.2 Adding New Users	9
4 Web Operations	12
Appendix 1 Notes of Face Recording/Comparison	13
Appendix 2 Notes of Temperature Monitoring	16
Appendix 3 Call Operation	17
Appendix 4 Cybersecurity Recommendations	XVIII

1 Dimensions and Components

Figure 1-1 Dimensions and components of T1 (mm [inch])

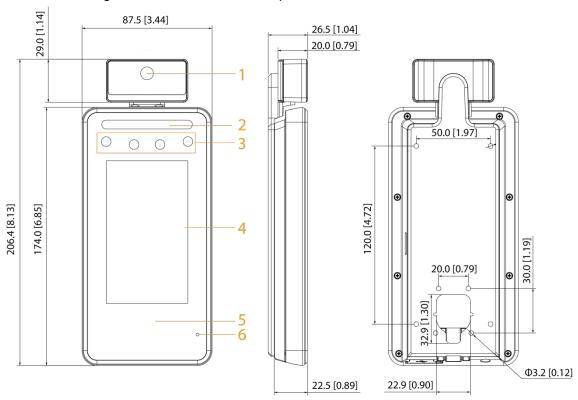


Figure 1-2 Dimensions and components of T (mm [inch])

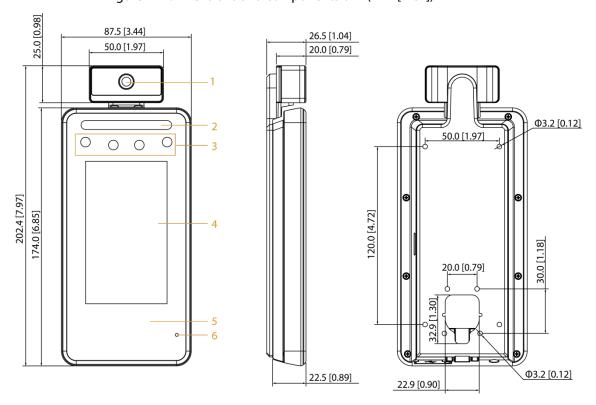


Table 1-1 Component description

No.	Name	No.	Name
1	Temperature monitoring unit	2	White LED illuminator

No.	Name	No.	Name
3	Dual cameras and IR lights	4	Display
5	Card swiping area	6	Mic

2 Connection and Installation

2.1 Cable Connection



- Check whether the access control security module is enabled in Function > Security Module. If enabled, you need to purchase access control security module separately. The security module needs separate power supply.
- Once the security module is enabled, the exit button, turnstile control, and firefighting linkage will be invalid.

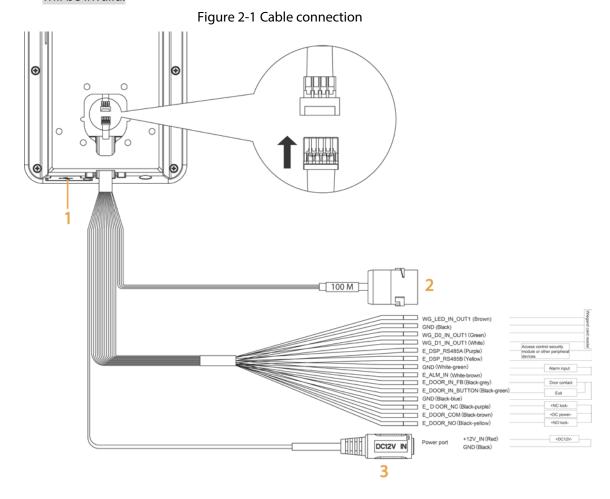


Figure 2-2 Ports

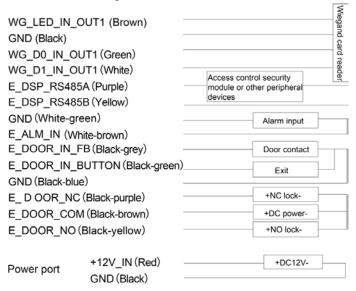


Table 2-1 Component description

No.	Name
1	USB port
2	100 M network port
3	Power port

2.2 Installation Notes



- If there is light source 0.5 meters away from the access controller, the minimum illumination should be no less than 100 Lux.
- It is recommended that the access controller is installed indoors, at least 3 meters away from windows and doors and 2 meters away from lights.
- Avoid backlight and direct sunlight.

Ambient Illumination Requirements

Figure 2-3 Ambient illumination requirement




Temperature Monitoring Requirements

• It is recommended to install the temperature monitoring unit in an indoor windless environment (a relatively isolated area from the outdoor), and maintain the ambient temperature at 10°C to 35°C for T1 access controller and 15°C to 30°C for T access controller.

- Warm up the temperature monitoring unit for more than 20 minutes after power-on to enable the temperature monitoring unit to reach thermal equilibrium.
- If there is no suitable indoor environment (including areas directly facing indoor and outdoor areas, and outdoor doorways), set up a temporary passage with stable ambient temperature for temperature monitoring.
- The factors such as sunlight, wind, cold air, and air conditioning cold and warm air can easily
 affect the surface temperature of human body and the working status of the access controller,
 which will cause the temperature deviation between the monitored temperature and the actual
 temperature.
- Influencing factors of temperature monitoring:
 - Wind: Wind will take away the heat from the forehead, which will affect the accuracy of temperature monitoring.
 - Sweating: Sweating is a way for the body to automatically cool down and dissipate heat. When the body sweats, the temperature will also decrease.
 - ♦ Room temperature: If the room temperature is low, the surface temperature of human body will decrease. If the room temperature is too high, the human body will start to sweat, which will affect the accuracy of temperature monitoring.
 - The temperature monitoring unit is sensitive to light waves with a wavelength of 10um to 15 um. Avoid using it in the sun, fluorescent light sources, air conditioning outlets, heating, cold air outlets, and glass surfaces.

Places Recommended

Figure 2-4 Places recommended

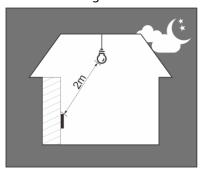


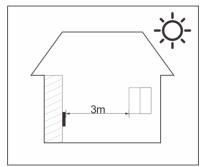


Figure 2-5 Places not recommended

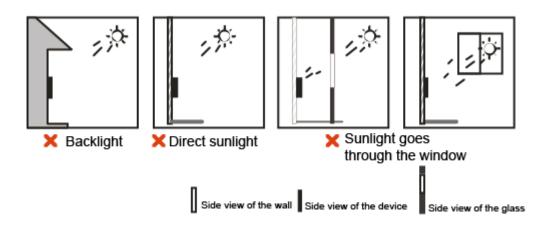

2.3 Installation

The recommended distance between the lens and ground is 1.4 meters.

Figure 2-1 Installation height


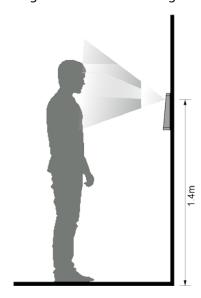



Figure 2-2 Wall installation

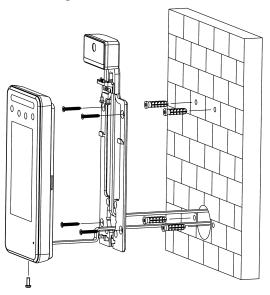

Wall Installation Procedure

- <u>Step 1</u> Drill four holes in the wall according to holes in the bracket.
- <u>Step 2</u> Install the expansion pipes into the four bracket installation holes by the hammer.
- Step 3 Run cables for the temperature monitoring unit through the hole in the bracket, and then fix the temperature monitoring unit on the bracket by two M2.5 screws.
- <u>Step 4</u> Fix the bracket into the expansion pipes on the wall by four tapping screws.
- <u>Step 5</u> Connect cables for the temperature monitoring that are on the temperature monitoring unit and the access controller, and connect other cables, such as power ports, network ports, and signal cables.
- <u>Step 6</u> Slide the access controller from up to down into the buckle of the bracket and tighten the screws at the bottom of the access controller.

Figure 2-3 Bracket installation

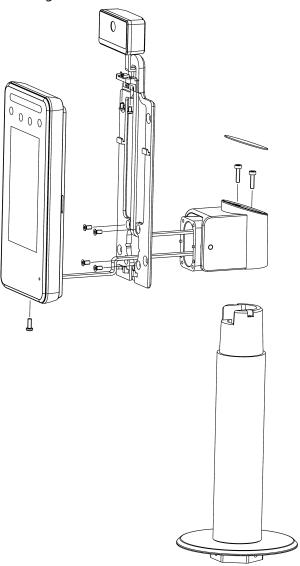

Bracket Installation Procedure


- Step 1 Run cables for the temperature monitoring unit through the hole in the bracket, and then fix the temperature monitoring unit on the bracket by two M2.5 screws.
- <u>Step 2</u> Fix the access controller bracket on the adaptor of the turnstile bracket by four countersunk screws.
- <u>Step 3</u> Connect cables for the temperature monitoring that are on the temperature monitoring unit and the access controller, and run other power ports, network ports, and signal cables through the adaptor of the turnstile bracket.
- <u>Step 4</u> Slide the access controller from up to down into the buckle of the bracket and tighten the screws at the bottom of the access controller.
- <u>Step 5</u> Connect power ports, network ports, and signal cables of the access controller with cables inside the turnstile.
- <u>Step 6</u> Fix the access controller and adaptor on the turnstile bracket by two M3 screws.
- <u>Step 7</u> Fix the decorative cap on the top of the turnstile bracket.

3 System Operations

3.1 Initialization

Administrator password and an email should be set the first time the access controller is turned on; otherwise the access controller cannot be used.

Figure 3-1 Initialization

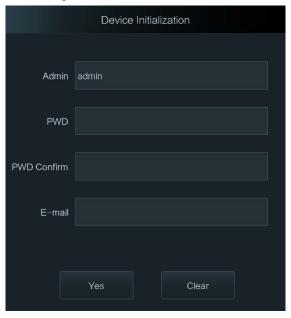



- The administrator password can be reset through the email address that you entered if the administrator forgets the administrator password.
- The password must consist of 8 to 32 non-blank characters and contain at least two types of characters among upper case, lower case, number, and special character (excluding ' ";: &).
- For access controllers without touch screen, initialization can be completed through the web interface. See the user manual for details.

3.2 Adding New Users


You can add new users by entering user IDs, names, importing fingerprints, face images, passwords, and selecting user levels.



The following figures are for reference only, and the actual interface shall prevail.

- <u>Step 1</u> On the standby interface, long press 3 s to go to the **Administrator Login** interface.
- <u>Step 2</u> Tap **Admin** to log in to the **Main Menu** interface with an admin account.
- Step 3 Select **User** > **New User**.

Figure 3-2 New user

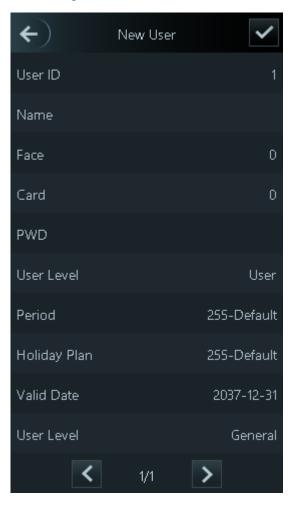

Step 4 Configure the parameters.

Table 3-1 Parameter description

Parameter	Description
User ID	Enter user IDs. The IDs can be numbers, letters, and their combinations, and the
	maximum length of the ID is 32 characters. Each ID is unique.
Name	Enter names with at most 32 characters (including numbers, symbols, and letters).
Голо	Make sure that your face is centered on the picture capturing frame and the access
Face	controller will take a picture of the new user's face automatically.
	You can register five cards at most for each user. On the card registration interface, enter
	your card number or swipe your card, and then the card information will be read by the
	access controller.
Card	You can enable the Duress Card function on the card registration interface. Alarms will
	be triggered if a duress card is used to unlock the door.
	Only certain models support card unlock and only one card can be the duress card.
PWD	The door unlocking password. The maximum length of the password is 8 digits.
	If the access controller is without touch screen, you need to connect the access
	controller to a peripheral card reader. There are buttons on the card reader.

Parameter	Description	
User Level	You can select a user level for new users. There are two options: User: Users only have door unlock permission. Admin: Administrators can unlock the door and also have parameter configuration permission.	
	No matter whether there is an administrator in the access controller, administrator identity authentication is needed.	
Period	You can set a period in which the user can unlock the door. See the user manual for details.	
Holiday Plan	You can set a holiday plan in which the user can unlock the door. See the user manual for details.	
Valid Date	You can set a period during which the unlocking information of the user is valid.	
User Level		
Use Time	When the user level is Guest, you can set the maximum number of times that the user can unlock the door.	

Step 5 Tap to save the configuration.

4 Web Operations

The access controller can be configured and operated on the web interface. Through the web interface you can set parameters including network parameters, video parameters, and access controller parameters; and you can also maintain and update the system. For details, see the user manual. Here only describe the login operation.




You need to set a password and an email address before logging in to the web interface for the first time. Password you set is used to log in to the web, and the email is used to reset passwords.

Step 1 Open IE web browser, enter the IP address of the access controller in the address bar, and then press Enter key.



- Make sure that the IP address of computer used to log in to the web is in the same LAN with the access controller.
- The default IP address of the access controller is 192.168.1.108.

Figure 4-1 Login

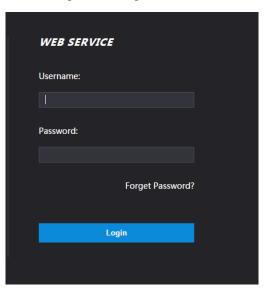

Step 2 Enter the username and password.



- The default username of administrator is admin, and the password is the login password after initializing the access controller. Modify the administrator password regularly and keep it properly for security.
- If you forget the administrator login password, you can click **Forget Password?** to reset it. See the user manual.

Step 3 Click Login.

The homepage of the web interface is displayed.

Appendix 1 Notes of Face Recording/Comparison

Before Registration

- Glasses, hats, and beards might influence face recognition performance.
- Do not cover your eyebrows when wearing hats.
- Do not change your beard style greatly if you will use the device; otherwise face recognition might fail.
- Keep your face clean.
- Keep the device at least two meters away from light source and at least three meters away from windows or doors; otherwise backlight and direct sunlight might influence face recognition performance of the device.

During Registration

You can register faces through the access controller or through the platform. For registration through the platform, see the platform user manual.

Make your head center on the photo capture frame. A picture of your face will be captured automatically.



Appendix Figure 1-1 Registration


• Do not shake your head or body, otherwise the registration might fail.

- Avoid two faces appear in the capture frame at the same time.
- Record again if you find that the picture of your face does not meet the requirements.

Face Position

If your face is not at the appropriate position, face recognition effect might be influenced.


Appendix Figure 1-2 Appropriate face position

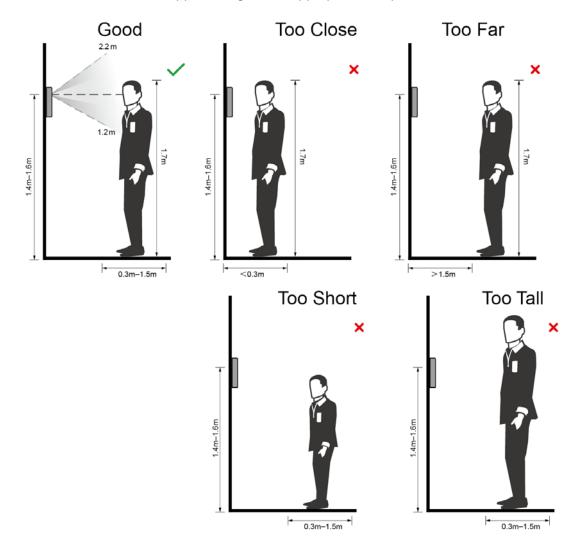


Requirements of Faces

- Make sure that the face is clean and forehead is not covered by hair.
- Do not wear glasses, hats, heavy beards, or other face ornaments that influence face image recording.
- With eyes open, without facial expressions, and make your face toward the center of camera.
- When recording your face or during face recognition, do not keep your face too close to or too far from the camera.

Appendix Figure 1-3 Head position

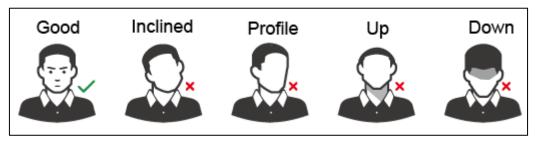

Appendix Figure 1-4 Face distance

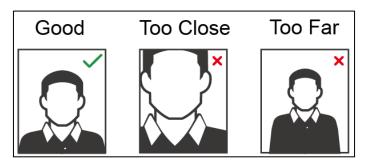



- When importing face images through the management platform, make sure that image resolution is within 150×300 to 600×1200 ; image pixels are more than 500×500 ; image size is less than 75 KB, and image name and person ID are the same.
- Make sure that the face takes up more than 1/3 but no more than 2/3 of the whole image area, and the aspect ratio does not exceed 1:2.

Appendix 2 Notes of Temperature Monitoring

- Warm up the temperature monitoring unit for more than 20 minutes after power-on to enable the temperature monitoring unit to reach thermal equilibrium.
- Install the temperature monitoring unit in an indoor windless environment, and maintain the indoor ambient temperature at 10°C to 35°C for T1 access controller and 15°C to 30°C for T access controller.
- Avoid direct sunlight on the temperature monitoring unit.
- Avoid installing the temperature monitoring unit facing at the light source and glass.
- Keep the temperature monitoring unit away from sources of thermal interference.
- The factors such as sunlight, wind, cold air, and air conditioning cold and warm air will affect the surface temperature of human body, which will cause the temperature deviation between the monitored temperature and the actual temperature.
- Sweating is also a way for the body to automatically cool down and dissipate heat, which will
 also cause the temperature deviation between the monitored temperature and the actual
 temperature.
- Maintain the temperature monitoring unit regularly (every 2 weeks). Use a soft dust-free cloth to gently wipe the dust on the surface of the temperature sensor and the distance sensor to keep it clean.

Appendix 3 Call Operation

The access controller can work as a VTO and call other devices.

Prerequisite

Configure relevant parameters on the access controller, VTH and master station, so that they can call each other. See "Call Configuration" on the user's manual.

Procedures

Step 1 On the standby interface, tap



Step 2 Enter the number of the VTH and then tap



Appendix Figure 3-1 Call interface



Appendix 4 Cybersecurity Recommendations

Cybersecurity is more than just a buzzword: it's something that pertains to every device that is connected to the internet. IP video surveillance is not immune to cyber risks, but taking basic steps toward protecting and strengthening networks and networked appliances will make them less susceptible to attacks. Below are some tips and recommendations on how to create a more secured security system.

Mandatory actions to be taken for basic device network security:

1. Use Strong Passwords

Please refer to the following suggestions to set passwords:

- The length should not be less than 8 characters;
- Include at least two types of characters; character types include upper and lower case letters, numbers and symbols;
- Do not contain the account name or the account name in reverse order;
- Do not use continuous characters, such as 123, abc, etc.;
- Do not use overlapped characters, such as 111, aaa, etc.;

2. Update Firmware and Client Software in Time

- According to the standard procedure in Tech-industry, we recommend to keep your device (such as NVR, DVR, IP camera, etc.) firmware up-to-date to ensure the system is equipped with the latest security patches and fixes. When the device is connected to the public network, it is recommended to enable the "auto-check for updates" function to obtain timely information of firmware updates released by the manufacturer.
- We suggest that you download and use the latest version of client software."

Nice to have" recommendations to improve your device network security:

1. Physical Protection

We suggest that you perform physical protection to device, especially storage devices. For example, place the device in a special computer room and cabinet, and implement well-done access control permission and key management to prevent unauthorized personnel from carrying out physical contacts such as damaging hardware, unauthorized connection of removable device (such as USB flash disk, serial port), etc.

2. Change Passwords Regularly

We suggest that you change passwords regularly to reduce the risk of being guessed or cracked.

3. Set and Update Passwords Reset Information Timely

The device supports password reset function. Please set up related information for password reset in time, including the end user's mailbox and password protection questions. If the information changes, please modify it in time. When setting password protection questions, it is suggested not to use those that can be easily guessed.

4. Enable Account Lock

The account lock feature is enabled by default, and we recommend you to keep it on to guarantee the account security. If an attacker attempts to log in with the wrong password several times, the corresponding account and the source IP address will be locked.

5. Change Default HTTP and Other Service Ports

We suggest you to change default HTTP and other service ports into any set of numbers between 1024~65535, reducing the risk of outsiders being able to guess which ports you are using.

6. Enable HTTPS

We suggest you to enable HTTPS, so that you visit Web service through a secure communication channel.

7. MAC Address Binding

We recommend you to bind the IP and MAC address of the gateway to the device, thus reducing the risk of ARP spoofing.

8. Assign Accounts and Privileges Reasonably

According to business and management requirements, reasonably add users and assign a minimum set of permissions to them.

9. Disable Unnecessary Services and Choose Secure Modes

If not needed, it is recommended to turn off some services such as SNMP, SMTP, UPnP, etc., to reduce risks.

If necessary, it is highly recommended that you use safe modes, including but not limited to the following services:

- SNMP: Choose SNMP v3, and set up strong encryption passwords and authentication passwords.
- SMTP: Choose TLS to access mailbox server.
- FTP: Choose SFTP, and set up strong passwords.
- AP hotspot: Choose WPA2-PSK encryption mode, and set up strong passwords.

10. Audio and Video Encrypted Transmission

If your audio and video data contents are very important or sensitive, we recommend that you use encrypted transmission function, to reduce the risk of audio and video data being stolen during transmission.

Reminder: encrypted transmission will cause some loss in transmission efficiency.

11. Secure Auditing

- Check online users: we suggest that you check online users regularly to see if the device is logged in without authorization.
- Check device log: By viewing the logs, you can know the IP addresses that were used to log
 in to your devices and their key operations.

12. Network Log

Due to the limited storage capacity of the device, the stored log is limited. If you need to save the log for a long time, it is recommended that you enable the network log function to ensure that the critical logs are synchronized to the network log server for tracing.

13. Construct a Safe Network Environment

In order to better ensure the safety of device and reduce potential cyber risks, we recommend:

- Disable the port mapping function of the router to avoid direct access to the intranet devices from external network.
- The network should be partitioned and isolated according to the actual network needs. If
 there are no communication requirements between two sub networks, it is suggested to
 use VLAN, network GAP and other technologies to partition the network, so as to achieve
 the network isolation effect.
- Establish the 802.1x access authentication system to reduce the risk of unauthorized access to private networks.
- Enable IP/MAC address filtering function to limit the range of hosts allowed to access the device.